

	Excelente	Bueno	Parcial	No Funciona
Alps				
Anitech	MD-1000,1200,2000,2010,2300,5000	MD-1500,4000,5500		
Apollo	M24			
Apple	P-1200,1250,2100,2150,2200,2250 P-1220 Barbie, 2500,2550,2600,2650			
Avery	12/640ps, Dot Matrix ImageWriter/ImageWriter LQ LaserWriter 4/600,16/600,IINTX,Ilg LaserWriter Pro 630,Select 360	Color StyleWriter 1500,2200,2400,2500 ImageWriter II,LaserWriter NT StyleWriter 1200, I, II StyleWriter II		
Brother	Personal Label Printer+	Personal Label Printer		
	HL-4Ve,8,10V,10h,630,660,720,730 HL-760,820,960,1020,1040,1070,1250 HL-1260,1270N,1430,1440,1450,1470N HL-1650,1660e,1670N,1850,1870N HL-2060,2400CeN,2460,2460N,2600CN HL-3260N,3400CN,3450CN,4000CN HL-5030,5040,5050,5070N HL-7050,7050N	HJ-400 HL-1030 HL-1050 HL-1060 HL-1230 HL-1240	DCP-1200,MC-3000 MFC 7150C,4350,6550MC,8300,9050 MFC-9100c,9500,9600,P2500	4550. HL-1435 MP-21C
Citoh	M8510			
CalComp	Artisan 1023 penplotter			
Canon	BJ-5,10e,10v,15v,20 BJ-30,35v,100,200,330 BJC-70,210,250,250ex,255SP,265SP BJC-600,610,620,680J,800,880J,4000 BJC-4100,4200,4300,4400,4550 GP 335,405 LBP-4+,4U,8A1,310,320 Pro,350,430 LBP-470,1000,1260,1760 LIPS-II+,III,IV,IVv	BJC-50,55,80,85,240,1000,2000,2010 BJC-2100,2110,3000,4310SP,6000 BJC-7004,8200 S100,400 imageRunner 330s LBP-4sx CP-100	BJ-300,210SP,6100,6200,6500 BJC-7000,7100 MultiPASSC2500,3000,3500 MultiPASS C5000,5500 S300,450,500,600,630,800,4500	BJC-5000,5100,8500 LBP-460,600,660,800 Multipass L6000 S200
Casio				
Citizen		KL-E11,P1000,C10		

Compaq	ProJet II,IIc printiva600C,600U,700	printiva1700		
DEC		IJ750,1200	IJ900	IJ300*
	DECWriter 500i,100i,520ic LA50,70,75,75 Plus LJ250,LN03,LN07	1800. LN17		
Dell				
Dymo-CoStar	M5200,S2500			
Epson	ASCII 250,ASCII+,EL40,EL60 LabelWriter II,XL,XL+ SE250,SE250+,Turbo			
	ActionLaser 1100,II	CL 760	MC 2000	AcuLaser C900
	ActionPrinter 3250	EPL-5700	MC 9000	AcuLaser C1000
	AcuLaser C1900,1900PS,2000,2000PS	EPL-5700L	MC 10000	EPL-5500W
	C4000,4000PS,4100,4100PS,C8500	EPL-5800L	PM 950C	PM 930C
	8500PS,C8600,8600PS	EPL-6100L	PM 970C	Stylus Photo R800
	CL 700,750,Dot Matrix	EPL-6200L	PM 9000C	
	EM 900C,900CN,930C,930CN	MC 5000	PM 10000	
	EPL-5200,5200+,5800,5800PS	MJ 520C	PX 7000	
	EPL-5900,5900L,5900PS,6100	MJ 5100C	PX 9000	
	EPL-6100PS,7100,N1600,N1600PS	PM 870C	Stylus Photo 2000P	
	EPL-N2050,2050+,2050PS,2050PS+	PM 4000PX	Stylus Photo R200	
	EPL-N2120,2500,2500PS	PM 5000C	Stylus Photo R300	
	EPL-N2750,2750PS	PX V500	Stylus Photo RX500	
	L-1000,LP-8000,2000,3000,7000	Stylus C50	Stylus Photo RX600	
	LP-7000G,xx00,LQ-24,500,570+,850	Stylus C63	Stylus Pro 7600	
	LQ-2550, LX-1050,MC 7000	Stylus C64	Stylus Pro 9000	
	MJ 930C,6000C,8000C,MachJet	Stylus C83	Stylus Pro 9500	
	PM 700C,730C,740C,750C,760C,770C	Stylus C84	Stylus Pro 9600	
	PM 780C,790PT,800C,820C,850PT	Stylus CX5400	Stylus Pro 10000	
	PM 880C,2000C,2200C,3000C,3300C	Stylus CX6400		
	PM 3500C,3700C,7000C,SQ 1170	Stylus Color 200		
	Stylus,800,C20SX/UX,C40SX/UX	Stylus Color 300		
	Stylus C41SX/UX,C42SX/UX,C60,C61	Stylus Color II		
	Stylus C62,C70,C80,C82,CX3200	Stylus Color IIs		
	Stylus CX5200,Stylus Color,83,400,440	Stylus Photo 950		

<p>Fujitsu</p>	<p>Stylus Color 460,480,500,580,600,640 660,670,680,740,760,777,800,850 860,880,900,980,1160,1500,1520, 3000,I,PRO,Stylus Photo,700,720,750, 780,785,790,810,820,825,830,870, 890,895,900,915,925,1200,1270,1280 1290,1290S,EX,EX3 Stylus Pro 7000,7500 Stylus Scan 2000,2500</p>	<p>Stylus Photo 960 Stylus Photo 2100 Stylus Photo 2200 Stylus Pro 5000 Stylus Pro 5500 Stylus Pro XL</p>		
<p>Generic</p>	<p>1200,2400,3400 FMLBP2xx Page Printer,FMPR PrintPartner 10V,16DV,20W,8000</p>		<p>OAKT Printer ZjStream Printer</p>	<p>GDI Printer</p>
<p>HP</p>	<p>ESC/P Dot Matrix Printer IBM-Compatible Dot Matrix Printer PCL 3,4,5,5c,5e,6,XL Printer PostScript Printer</p>	<p>DesignJet 250C,350C,450C,455CA 488CA,650C,750C,750C Plus DeskJet 350C,420C,520,560C,3320 3325,3420,3425,3520,3528,3550,3558 3650,3658,3668,5150,5158 5160,5650,5652,5670,5740,5850 6520,6540,6840,6800. LaserJet 2D,1000,1005,1150,3200 3200m,3200se,3330 MFP OfficeJet,300,330,350,500,520,570 580,590,600,610,625,630,635,700,710 720,725,4100,4105,4110,4115,4200 5105,5110,5110xi,5500,6100,6105 6110,6150,6200,7100,7110,7130,7140 7200,7300,7400,9100,D135,D145,D155 G85,G95,K60,K60xi,K80,K80xi,LX,T45 T65,V40,V40xi PSC 950,950xi,1100,1110,1200,1205 1210,1300,1310,1600,2210,2300,2350 2400,2500. PhotoSmart 7260</p>	<p>DesignJet 5500 LaserJet 1010 LaserJet 1012 LaserJet 1015 ThinkJet</p>	<p>Color LaserJet 3500 LaserJet 3100 LaserJet 3150 PhotoSmart</p>

<p>Heidelberg</p> <p>Hitachi</p> <p>IBM</p> <p>Imagen</p> <p>Infotec</p> <p>Kodak</p>	<p>970C,975C,980C,990C,995C,1000C 1100C,1120C,1125C,1200C,1220C 1600C,1600CM,3740,3810,3816,3820 3822,3840,5550,5551,6122,6127,9300 9600,Plus,Portable LaserJet,2,2ps,2P,2P Plus,3,3D,3P,3Pps 4,4 Plus,4L,4M,4ML,4P,4Si,4V,4V/LJPro 5,5L,5M,5MP,5P,5Si,6,6L,6MP,6P 1100,1100A,1160,1200,1220,1300,1320 2100,2100M,2200,2300,2410,2420 2430,3300 MFP,3310 MFP,3320 MFP 3320NMFP,4000,4050,4100,4200,4250 4300,4350,5000,5100,8000,8100,8150 9000,9000 MFP,9040 MFP,9050 MFP LaserJet Plus,Mopier 240,320 OfficeJet D125,G55,R40,R45,R60,R65 OfficeJet R80 PaintJet,XL,XL300 OfficeJet Pro 1150C,1170C,1175C PSC 370,380,500,750,750xi PSC 2110,2150,2170,2175 PhotoSmart 140,240,320,370,2600,2700 7150,7345,7350,7400,7550,P100,P130 P230,P1000,P1100,P1115,P1215,P1218 P1315,e-printer e20</p> <p>Digimaster 9110</p> <p>DDP 70 (with MicroPress)</p> <p>3853 JetPrinter,4019,4029 10P 4303 Network Color Printer* Execjet 4072,Infoprint 12 Page Printer 3112,Pro Printer II</p> <p>ImPress</p> <p>4651 MF</p> <p>DigiSource 9110 IS 70 CPII</p>		<p>PhotoSmart 7268 PhotoSmart 7660 PhotoSmart 7760 PhotoSmart 7960 PhotoSmart 8100 PhotoSmart 8400</p> <p>4029 030 LaserPrinter 10</p>	
---	---	--	---	--

Kyocera	F-800,800T,820,1000,1010,1200 1200S,1800,2000,2010,2200,2200S 3000,3010,3300,5000 FS-400,600,600(KPDL-2),680,800,850 1000,1000+,1010,1050,1200,1500 1550,1550+,1600,1600+,1700,1700+ 1750,1800,1800+,1900,3400,3400+ 3500,3600,3600+,3700,3700+,3750 3800,5500,5800C,5900C,6500,6500+ 6700,7000,7000+,8000C,9000 9100DN,9500DN P-2000,2002	KM-1530 KM-1810 KM-2030 KM-2530 KM-3530 KM-4230 KM-4530 KM-5230 KM-5530 KM-6230		
LaserMaster				LM 1000
Lexmark	4039 10plus,E210 Optra C710 Optra Color 40,45,1200,1275 Optra E,E+,E310,E312,Ep,K 1220,M410 M412,R+,S 1250,S1855,Se 3455,T610 T612,T614,T616,W810 Valuewriter 300 Z52,Z53	1020 Business 3000. 3200. 4076. Z31 Z42	1000,1020,1100,2030,2050,2070,5000 5700,7000,7200 Winwriter 150c,400 X73,74,75,125 Z11,Z12,Z22,Z32,Z33,Z43,Z51,Z82	Winwriter 100 Winwriter 200 Z13 Z23
Minolta	PagePro 6,6e,6ex,8,8L PagePro 1100 PagePro 1250E	Color PageWorks/Pro L PagePro 1200W,1250W,1300W,1350W magicolor 2200 DL,2300DL magicolor 2300W,3100		PagePro 6L PagePro 1100L
Mitsubishi	CP50 Color Printer			
NEC	MultiWriter,P2X,PICTY180 PC-PR150,201,1000,2000 PinWriter P6,P6 plus,P7,P7 plus,P60 P70,P20 SilentWriter LC 890,95f		SuperScript 100C* SuperScript 150C* SuperScript 650C* SuperScript 750C* SuperScript 860*	SuperScript 610plus* SuperScript 660* SuperScript 660plus*

Oce	Silentwriter2 S60P,290 SuperScript 660i,1800,4600N		SuperScript 870* SuperScript 1260*	
Okidata	3165,9050.			
	DP 5000,ML 320,ML321,ML380 Microline 600CL,620CL Microline IBM compatible 9 pin OL400,400e,400ex,600e,610e/PS OL800,810e/PS,810ex,830Plus Okipage 6e,6ex,8c,8p,10e,10ex Okipage 12i,14ex,20DXn	Microline 182 OL400w OL410e OL610e/S Okijet 2500 Okipage 4w,4w+,6w,8w,8w Lite,8z Super 6e	Microline 192+ OL820	Okijet 2010
Olivetti	JP350S,JP470,PG306		JP450	
Olympus		P-300E,300NE,300U,400		
PCPI		1030		
Panasonic	KX-P1123,1124,1150,2023,2135,2150 KX-P4410,4450,5400,8420,8475	KX-P2123 KX-P6150	KX-P1180i,1624,6500,S600 KX-Pxxxx 24-pin	KX-P6100,8410 KX-P6300 GDI
Pentax	PocketJet 200,II			
Printrex			820 DL	
QMS	2425 Turbo EX,LPK-100,magicolor 2+	ps-810		magicolor 2
Raven		LP-410		
Ricoh	4081,4801,6000 Aficio 220,700,AP2000 RPDL I,II,III,IV Laser Printer	Aficio 401		Aficio Color 2206 Afico FX10
Samsung	ML-85,200,210,1000,1010,1020,1200 1210,1220,1250,1410,1430,1440,1450, 1450PS,1510,1650,1651N,1710,1750 2150,2150PS,2151N,2151NPS,2152W 2152WPS,2550,2551N,2552W,4500 4600,5000a,5080,6000,6100,6040	ML-85G QL-85G		CLP-500 ML-5050G SF/MSYS/MJ-4700/4800/4500C

Seiko	7000,7000P,7000N,7050,7300,7300N QL-6050,SI-630A			
Sharp	SpeedJET 200	SLP,120,220,EZ30,Plus,Pro,100,200,240		
Sony	AR-161	AJ-1800,1805,2000,2005		AJ-2100
Star		IJP-V100		
Tally	JJ-100,LC24-100,LS-04,NL-10	LC 90,LC24-200,LaserPrinter 8 NX-1001,StarJet 48		WinType 4000
Tektronix	MT908			
Xerox	3693d color printer, 8-bit mode 4693d color printer, 2-bit, 4-bit mode 4695,4696,4967 Phaser 780,850,IISX,PX	Phaser 350		
	2700 XES,3700 XES,4045 XES DocuPrint 4508,C20,C55,N17,N32 DocuPrint N4512,N4512PS Document Centre 400	Able 1406 DocuPrint C6,M750,M760,P8e DocuPrint P12,P1202	DocuPrint C8,C11,XJ6C,XJ8C Document Homecentre WorkCentre 450cp,470cx,XK35c	DocuPrint P8 WorkCentre 385 WorkCentre XD120f* WorkCentre XE80,XE90fx